

# THEREMINI™ QUICK START

## GETTING STARTED

1. Mount your Theremini on a microphone stand or place it on a non-metallic table.
2. Ensure that the Theremini is at least 4 feet away from any large metal objects.
3. Place the pitch antenna snugly into the pitch antenna slot.
4. Using the supplied power adapter, plug the Theremini into a wall outlet.
5. Press the POWER button on the back panel.
6. After the tuner screen appears, press and hold the SETUP button for two seconds. The CALIBRATION screen will appear.
7. Press EFFECT and follow the on-screen instructions to calibrate your Theremini.

## REGISTER YOUR THEREMINI

It is important to register your Theremini to be notified of new sounds, features, and updates as they become available.

[WWW.MOOGMUSIC.COM/REGISTER](http://WWW.MOOGMUSIC.COM/REGISTER)

