

Reset GoPro Wireless Settings

GoPros in the CADL Library of Things have multiple users. This means if you want to connect the GoPro to the GoPro App, you may need to reset the wireless.

To reset the wireless:

1. Hold the info/wireless button down for approximately 10 seconds. The display will show “Reset Wi-Fi? No Yes” with No highlighted.
2. Press the info/wireless again to change the selector so that “Yes” is highlighted.
3. Press the top shutter button to select Yes and reset the wireless.
4. Now you may pair the GoPro with your GoPro App. Follow the on-screen instructions.

